

External

Hot Press / Plant Room

Notes

This diagram is intended for use in Ireland as an overview of connection terminals and cable sizes for use on site.

Please refer to the manufacturers Installation Guide for full electrical details and guidance.

All connections should be verified for polarity by a qualified electrician.

Full Installation Guide



Training Videos



Ideal Energy Distribution Ltd.


Drawn By Odhran Casey

Date 25/07/25

Drawing Logic Air Wiring



Outdoor Unit

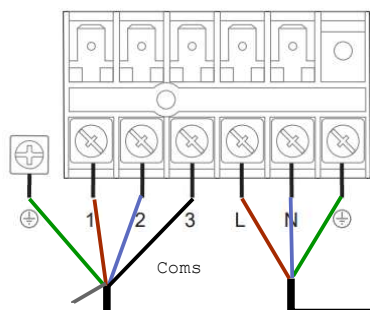

Main Fuse Box

Type C-Curve

4 & 5KW 20A

8 & 10KW 32A

Type B

5A

3KW 16A


1.5mm² (3 Core)

2.5mm² (3 Core)

0.5mm² (2 Core)

6mm² (3 Core)

Logic Air Control Box

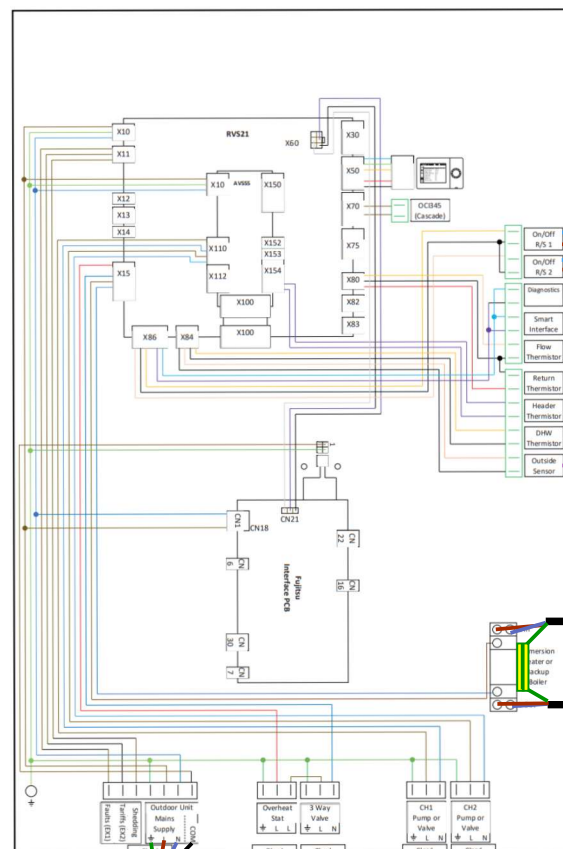

Grey Not Used

1.5mm² (5 Core)



Set Neostat Feature 04
Output Delay to 15mins

To immersion
Heater or
Backup
Boiler